



# Functions:

# Music Play:

- Insert USB drive or micro SD card with MP3 files to enjoy music
- Using the 3.5mm audio cable to connect your phone with the speaker to play music
- 3. Short press"+" to play the next song.

  Short press"-" to play the previous song
- 4. Long press"+" to increase the volume.
- Long press "-" to reduce the volume

# Radio Mode:

- Insert the charging cable into the charging slot to act as an external antenna
- 2. Press the "M" button to enter the FM mode.
- 3. Long press the ">II" button to search channels automatically.
- 4. After the searching is completed, press +/- to switch the radio.

# TWS Function:

Turn on two speakers at the same time. When they are in bluetooth mode, Long press the "•II" button. Wait for the speakers to connect. Final connect with your bluetooth device

# LED Light:

Switch On your speaker, led light will turn on automatically, then you can long press "M" adjust led light mode and switch off the led light.

# Charging:

- 1. Type-C charging cable
- When the speaker charging red light will show, Light will be off when it's fully charged.

# Popost

Repeat charging and discharging will lead to the decline of battery life, which is a normal phenomenon for all possible rechargeable batteries.

# Calling:

Click the "•II" button to answer/hang up the phone call, Long press the "•II" button to reject the phone call. Double-click the "•II" button to redial the latest number.

