 


E GATE[®]

USER MANUAL

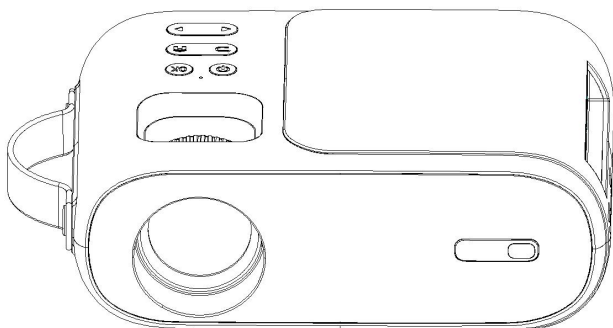

Home Theater Projector



USER MANUAL

CONTENTS

Important Safety Instructions -----	01-02
Packing List -----	03
Overview -----	04
Remote Control -----	05
Getting Started -----	06
Start Using -----	07
HDMI AV Connection -----	08
USB /BT Speakers -----	09
BT Mode Connection -----	10
Specifications/ Trouble Shooting-----	11

Important Safety Instructions

Thank you for purchasing projector .

Please read this manual thoroughly before using and keep it for future reference

If physical injury , loss of data , or damage is caused by failure to follow instructions , the warranty does not apply

Set Up

- Do not install the projector in places without proper ventilation
- Do not install the projector in hot and humid places
- Do not install the projector in dusty or smokey places .
- Do not block the ventilation holes (intake or exhaust)
- Do not install the projector near the temperature and smoke detectors . It may cause a sensor failure .
- Do not install the projector in areas where warm and cool air will blow directly onto the projector ,otherwise it may cause projector failure due to moisture condensation or large temperature changes

Power Supply

- Power off the device before removing the power supply from the socket

- Use the power cord with caution to avoid unduly bending it
Damaged power cords may cause electricshock or fire
- Unplug this device if there are lightning storms or when unused for a long period of time .
- Never touch the power cable or the power connection with wet hands
- Unplug the power cord from the outlet after using the projector

Repairs

- Never make any repairs to the projector yourself
- No components in the projector can be repaired by customers .
- Please entrust qualified professional maintenance personnel for repair .

Caution

- Do not look at the lens or it may cause severe eye injury
- During and after use , the temperature near the outlet will rise .
Therefore touching it may cause burns .
- Do not place projector in too warm or too cold room , because the high temperature or low temperature will shorten lifespan of the device . The working environment would be 5 ° C better .

Packing List



Projector



Remote (Batteries
Not included)



 
HDMI Cable



AV Cable




Power Cable







User Manual

 Overview

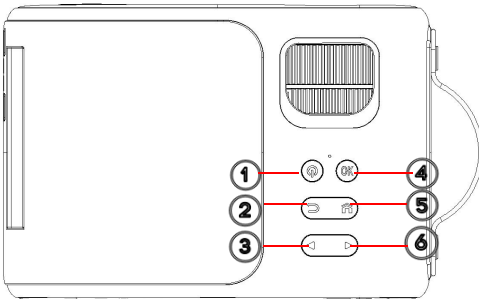

    - 1.Power Button
- 2.Back Button
- 3.Left
- 4.Confirm Button
- 5.Home Button
- 6.Right

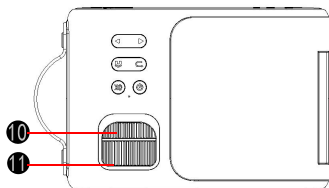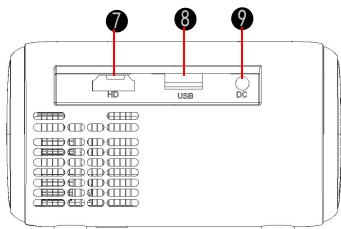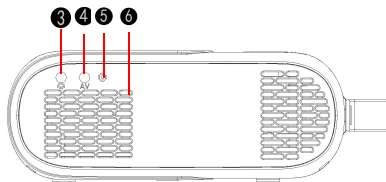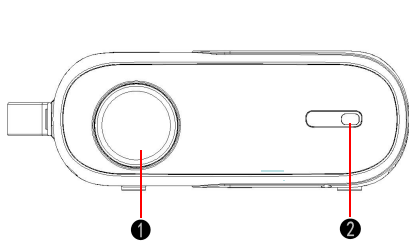

1.Focus lens

2.IR receiver

3.3.5mm port for audio output

4.AV port

5.IR receiver

6.Speaker

 
7.HDMI port

8.USB port

9.Power interface


10.Upper and lower trapezoid correction

11. Focussing ring

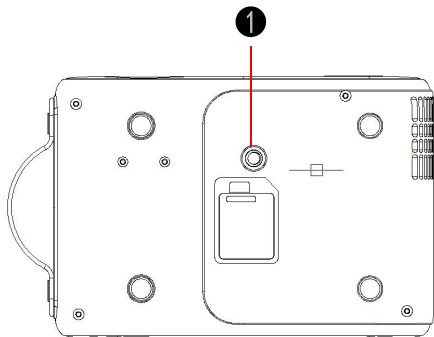


1.Bracket nut

 
Remote Control

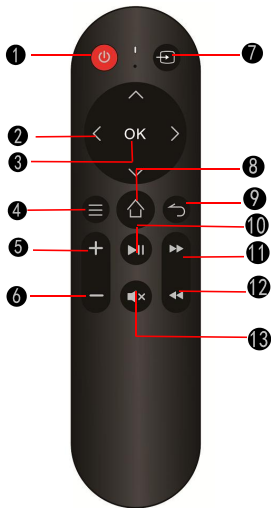

- 1.Power Switch
- 2.Direction Button
3. Confirm Button
- 4.Menu Button
- 5.Volume+
- 6.Volume-
- 7.Signal Source
- 8.Home Button
- 9.Back Button
- 10.Pause/Play Button
- 11.Fast forward
- 12.Previous
- 13.Mute

  Getting Started Projector Placement

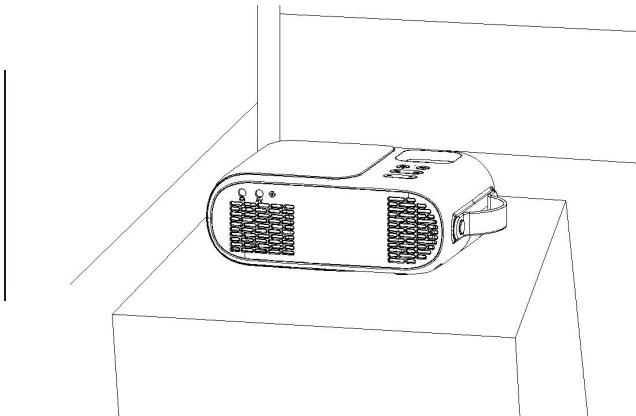


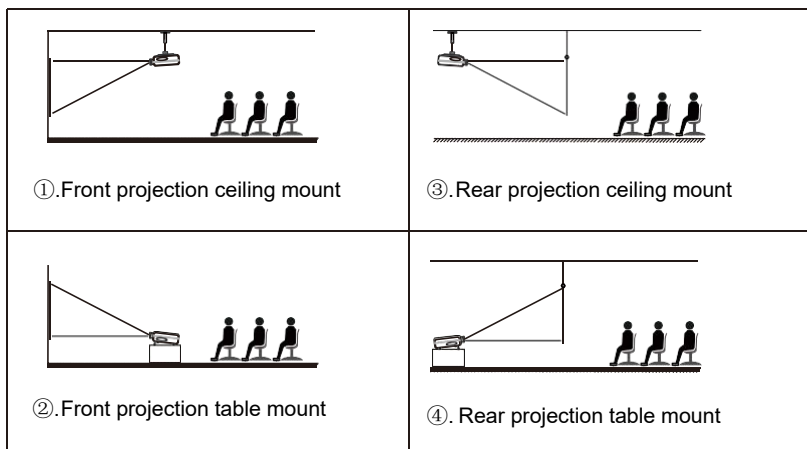

Note:


- (1) During the installation process, please do not operate with electricity to avoid electric shock hazard and projector circuit failure.
- (2) Please keep a gap of at least 30 cm from the wall. Do not cover or block the projector's vents with any objects. Make sure that the projector has enough ventilation to ensure the projector's performance and reliability.
- (3) If you have a projector screen and need to be mounted on a ceiling, the projector cannot be higher than the upper edge of the screen, otherwise it will affect the image effect.

 Ceiling installation


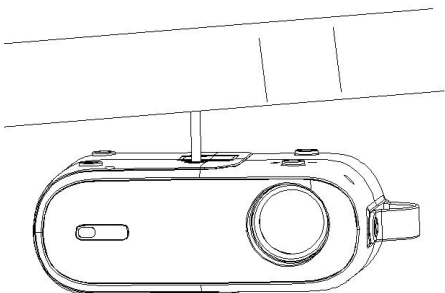


1. Please purchase an universal projector ceiling mount;
2. At the bottom of the projector you will see the screw holes. Use M1/4 screws to install the ceiling and then install it.

 Start Using Power On


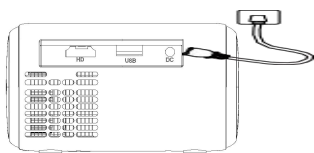


- 1 Plug the power cord into an outlet.

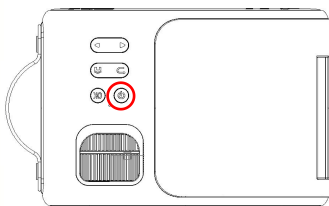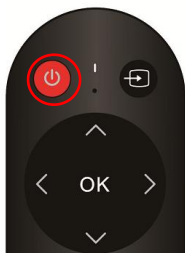  

- 2 Press the power button to turn on the projector.

  Projector Distance & Size

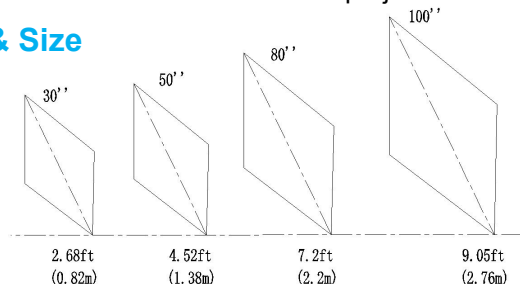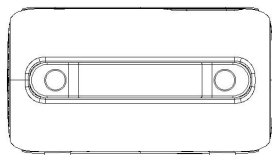

The recommended projection screen is around 80 inches with a projection distance of around 8.92 ft. Ambient darkness will improve the clarity of the projected images.

Aspect Ratio(16:9)	
Distance	Screen Size(inch)
2.68ft(0.82m)	30
4.52ft(1.38m)	50
7.2ft (2.2m)	80
9.05ft (2.76m)	100

 
 
Input Source

A.HDMI mode

Step 1: Connect the projector and equipment with HDMI cable.

Step 2: Press and hold the source button >> of the projector or remote control to enter the input source interface, or use the button to select HDMI on the main interface of the projector.

Step 3: Select the HDMI cable to connect to the corresponding interface HDMI1 or HDMI2, press the OK key to enter the interface, and press the return key to exit and return to the main interface of the projector.

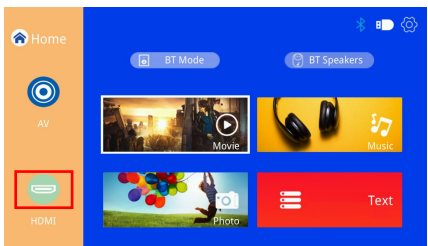
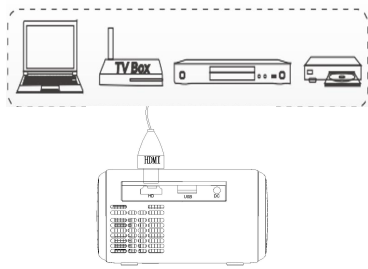


B.AV mode

Step 1: Connect the projector and the equipment with the AV cable.

Step 2: Press and hold the source button of the projector or remote control to enter the input source interface.

 
 
Step 3: Select AV, press OK to enter, press Return to exit and return to the main interface of the projector.

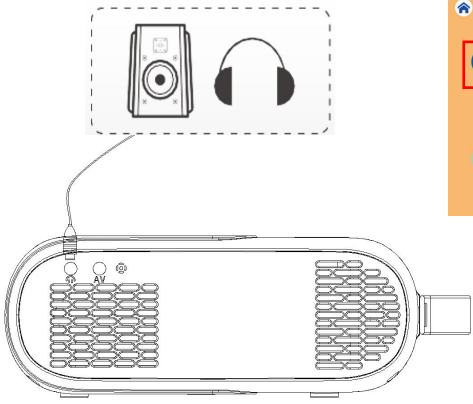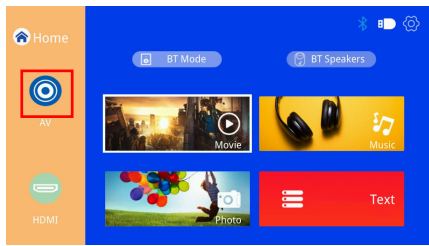

C.USB mode


Step 1: Connect the projector to the U disk, the U disk on the main interface of the projection screen will display the highlighted state.

  Step 2: Select the corresponding Movie, Music, Picture and Office Suite modules of the file type, and press OK to enter the file.

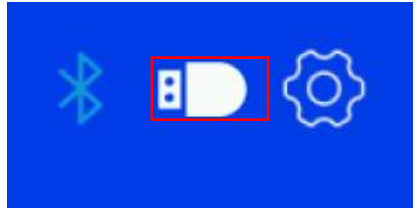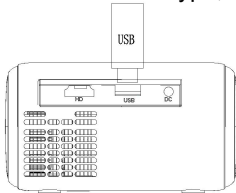

Adjusting the projected image

 After adjusting the size and distance of the projector, please rotate the focus ring Up and Down to change the front and rear positions of the lens until a clear image is obtained.


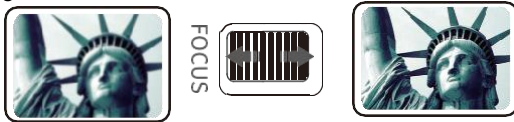


Bluetooth mode

Note: The projector can be connected to external speakers through Bluetooth. It can also connect to music streams on smartphones or tablets through Bluetooth.

How to connect a projector to an external speaker 'Bluetooth Speaker'?

  Step 1: Use the remote control or button on projector to locate the Bluetooth Speakers icon on the projector's main interface and press the OK button to enter

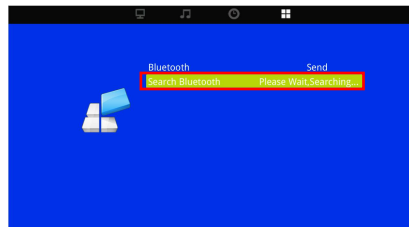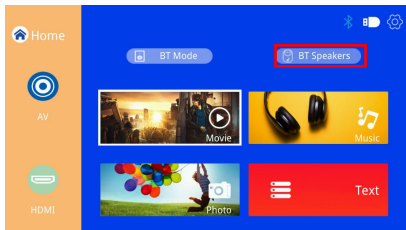



Step 2: Switch the Bluetooth option to Send, use the remote control to switch to the search Bluetooth option, and press the OK button

Step 3: Select the Bluetooth speaker to be connected from the device list, and then press "OK" to pair (the Bluetooth speaker must be turned on to be searched)

Step 4: After successful connection, the Bluetooth device will display Connected.

How to connect the projector to the phone via bluetooth:

  Step 1: Find the (BT Mode) icon on the main interface and press OK to enter
Step 2: Turn on the Bluetooth of the mobile phone, find the Bluetooth name of the projector (Projector), and click Pair to connect

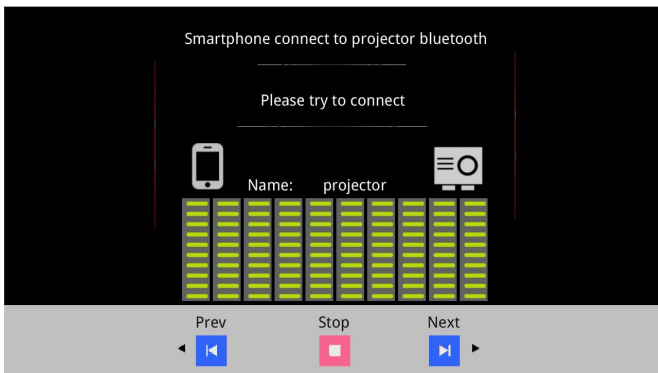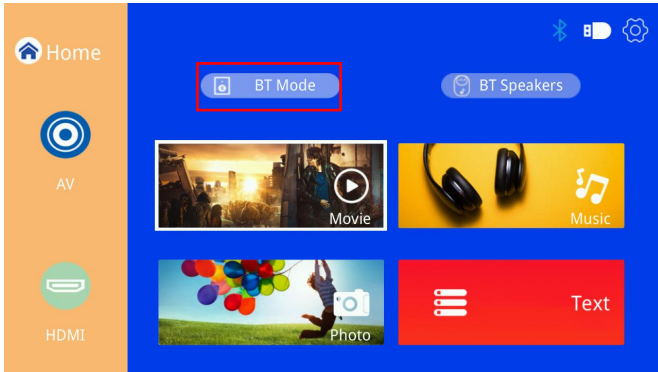

Specifications

Display Technology	LCD	light source	LED
Aspect Ratio	16:9/4:3/Auto	focus	Manual
Keystone	$\pm 15^\circ$	projection mode	Front / Rear / Ceiling
Unit Dimension	175*119*68	unit net weight	0.8kg
Photo FormatSupported	JPG/JPEG/PNG/BMP	audio formatsupported	MP3 / AAC / FLAC / OGG / WAV/ WMA / MID / DTS / M4A
Video FormatSupported	3GP / AVI / FLV / MP4 / MPG /VOB / TS / M2TS / RMVB / MKV	ports	HDMI *1 / USB 2.0 *1 / Audio in*1 / AV out* 1

Trouble Shooting

Q1.Blurry Image

- Make sure the projection distance is fartherthan the minimum projection distance of 0.8 m.
- Adjust focus ring.

Q2.The projector image shows no signal

- Please make sure all cables are connected to the projector properly and stably.
- Check whether the projector input source modehas been selected as the corresponding format.
- For example:the device and the projector are connected with an HDMI cable, the HDMI input channel must be selected for projection,and no signalwill be displayed if other channels are selected.

Q3.What should I do if I want to watch the contert from Hulu, Netflix, and similar services via the projector?

- Please prepare a Fire TVstick,Roku stick or ChromecastTM(not included), then connect it to the projectorto watch the content.

Q4.Remote Unresponsive

- Make sure remote points at IR receiver directly.
- Do not cover IR receiver.
- *Try a new pair of AAA batteries.

Q5.The projector will stop automatically every after time it is used for a period of time

- Check if the projector's air inlet and outlet are blocked by other objects.
- Please pay attention to whether the local mains voltage is too low or too high or fluctuates too much.

WARRANTY CERTIFICATE **E GATE**[®]

The manufacturer warrants this product to be free from defects in material and manufacturer's workmanship for a period of **1 year** from the date of purchase. This warranty is subject to proper installation and usage as it is intended to be and as mentioned on the Egate's website. The manufacturer will not be liable for any special, incidental or consequential damages in any way related to, or arising out of, defects in, or damage to the unit. This is a back to bench warranty, to be brought in at Egate service centre in Ghaziabad.

Name : Tel : Model :
Pur.Date : Inv.No. : S.No. :



Scan to Register

This Certificate is valid only after mandatory warranty registration within 15 days of purchase



For Support : call at 706 517 9993 /4 / 5 or mail at support@egin.in

**For warranty policy please visit company website www.egate-world.com*

E&OE : Any matter of legal dispute will be entertained in the jurisdiction of Ghaziabad court only



E GATE[®]

Mail : support@egin.in call : 0 706517 9993 / 4 / 5

Ship To : Service Centre ,

504, SG Alpha Tower II, Sec-9, Vasundhara, Ghaziabad , UP 201012.

E. & O.E. : Any matter or legal dispute will be entertained in the jurisdiction of Ghaziabad Court only.